

# Stager Cam Assembly Master Chart

FILL IN PROPER DESIGNATIONS TO DETERMINE PRODUCT NUMBER:

<b>Base #</b>	<u>One base PN per stager series</u>
CAM48	= 48 series stagers
CAM51	= 51 series stagers
CAM58	= 58 series stagers

<b>PROGRAM</b>	<u>Stager Program to be Provided</u>
*00 - 99	= STANDARD stager model "dash" number for customs, we will assign random dash numbers as required
*TA	= Twin Alternating Softener
*TB	= Twin Alternating Softener with timed brine draw
*TP	= Twin Alternating Softener with pre-rinse down
*TR	= Twin Alternating Softener with timed refill
* Two character designation from standard stager drawing.	
** If Custom Program, enter last five digits of drawing number	

<b>1<sup>st</sup> AUX. SWITCH</b>	<u>First Extra Switch to be provided on Rotary Pilot Stager</u> (Add/Remove digits as required. Skip if not used)
*A to R	= CAM POSITION Switch is to be active (I & O not used) Select position off of stager drawing for respective program If multiple notch positions required, concatenate letters Example: 'AE' would have notch in both A and E positions.
S	= Homing cam for 58-TB, 58-TR only
W	= Butterfly cam for 58-TA status lights
Z	= Blank Cam (no notches)
* Use a Letter to indicate Cam position Not a Number.	
# For Butterfly cams, "#" then starting ":" ending location. Example: CAM58-TP-#P:B-AJ	

<b>2<sup>nd</sup> AUX. SWITCH</b>	<u>First Extra Switch to be provided on Rotary Pilot Stager</u> (Add/Remove digits as required. Skip if not used)
*A to R	= CAM POSITION Switch is to be active (I & O not used) Select position off of stager drawing for respective program If multiple notch positions required, concatenate letters Example: 'AE' would have notch in both A and E positions.
S	= Homing cam for 58-TA only
T	= Brine switch cam for 58-TR, 58-TB only
Z	= Blank Cam (no notches)
* Use a Letter to indicate Cam position Not a Number.	
# For Butterfly cams, "#" then starting ":" ending location. Example: CAM58-TP-#P:B-AJ	